




BMW E36 / E46 Seat Mount Kit

Manual

Make sure the bolts are Oil free to tighten them with torque!

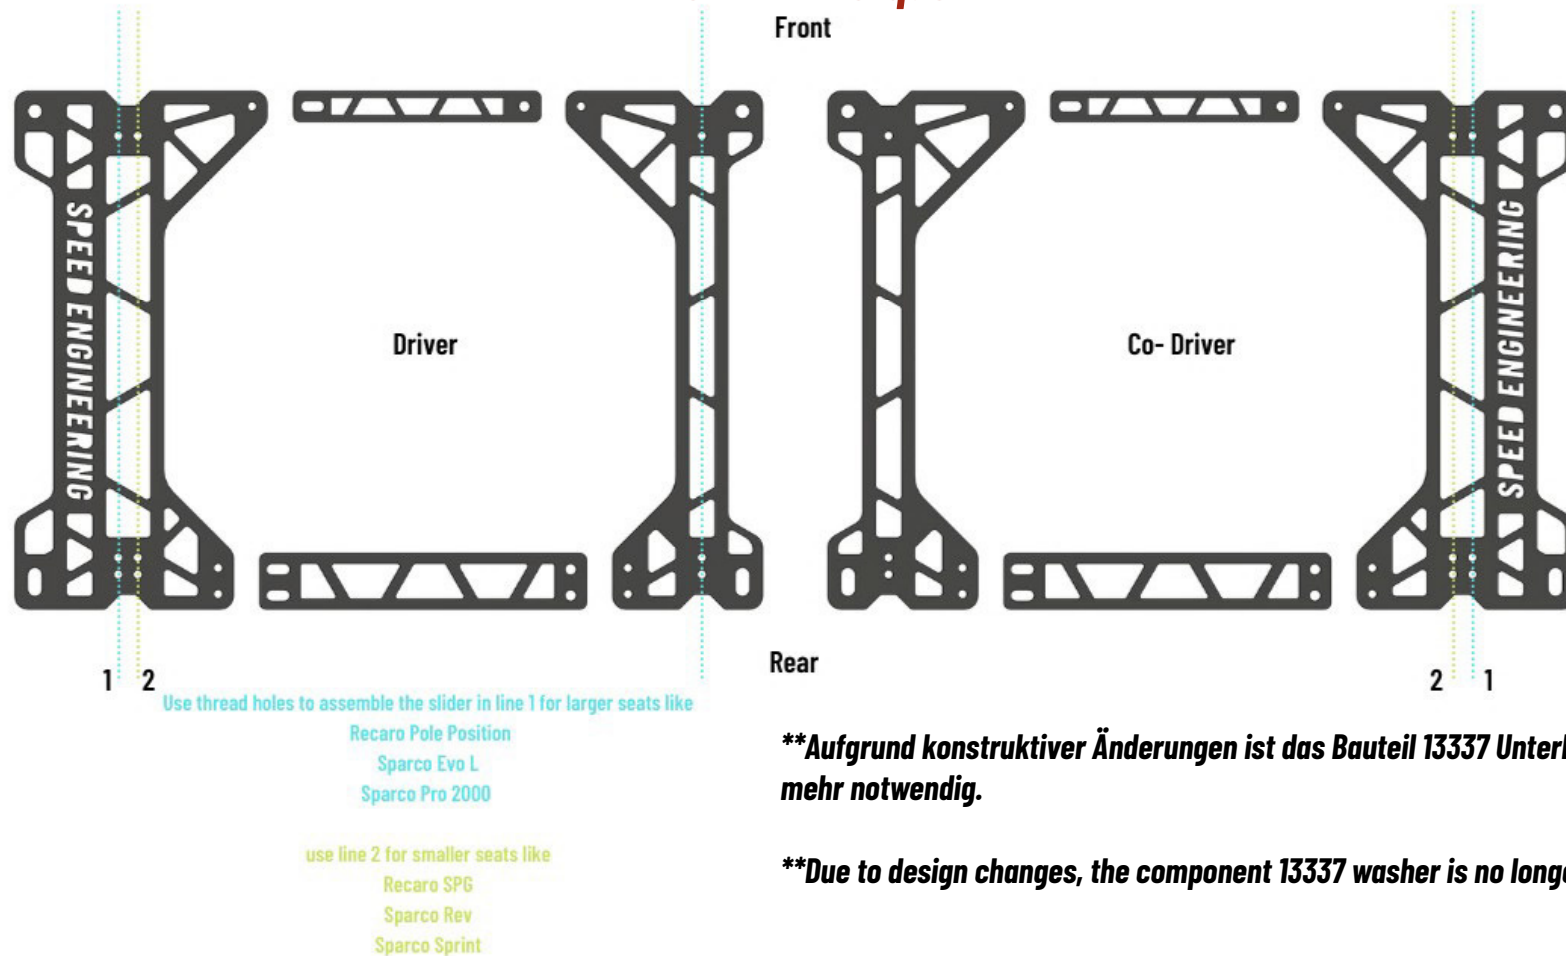

*****Aufgrund konstruktiver Änderungen ist das Bauteil 13337 Unterlegscheibe nicht mehr notwendig.***


*****Due to design changes, the component 13337 washer is no longer required.***


This product is designed and produced by the SPEED Engineering GmbH.

If you have any questions or comments,
please feel free to contact us.

STEP 1

Console assembly
Driver

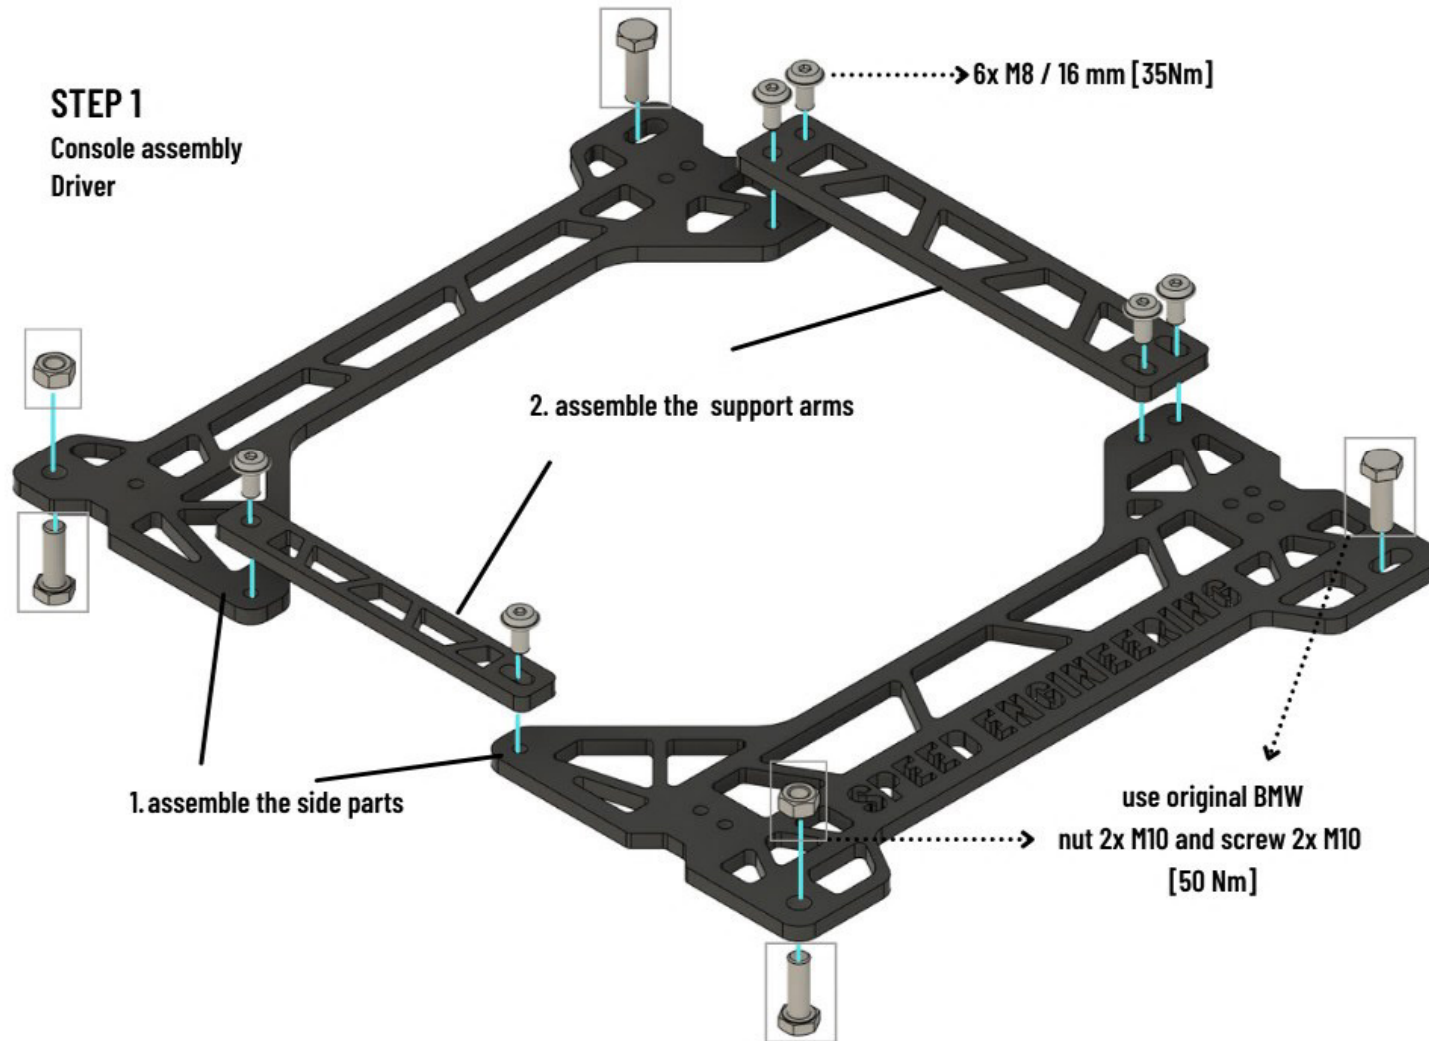

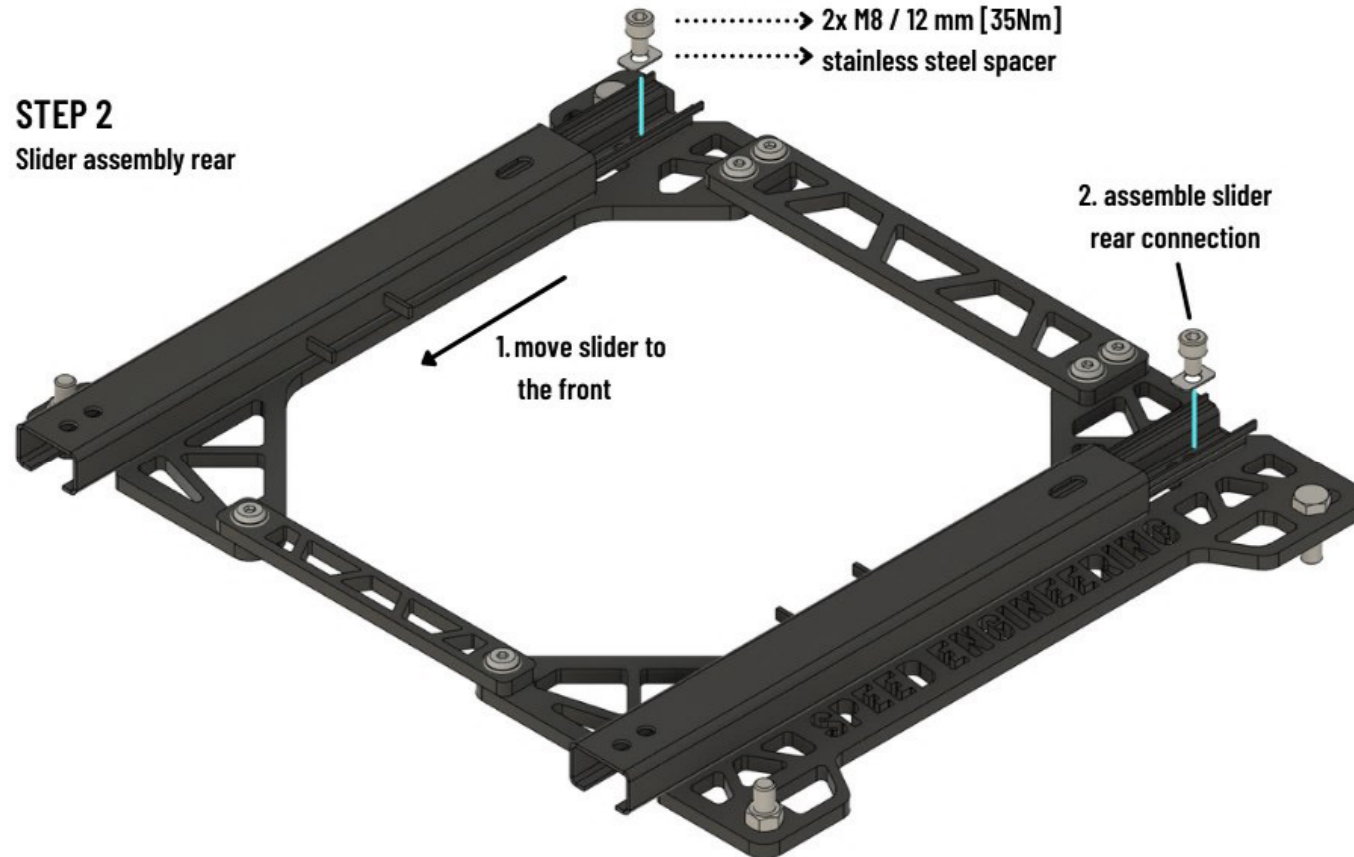

STEP 3


Slider assembly front

2x M8 / 12 mm [35Nm]


stainless steel
spacer.....

1. move slider to
the rear

2. assemble slider
front connection

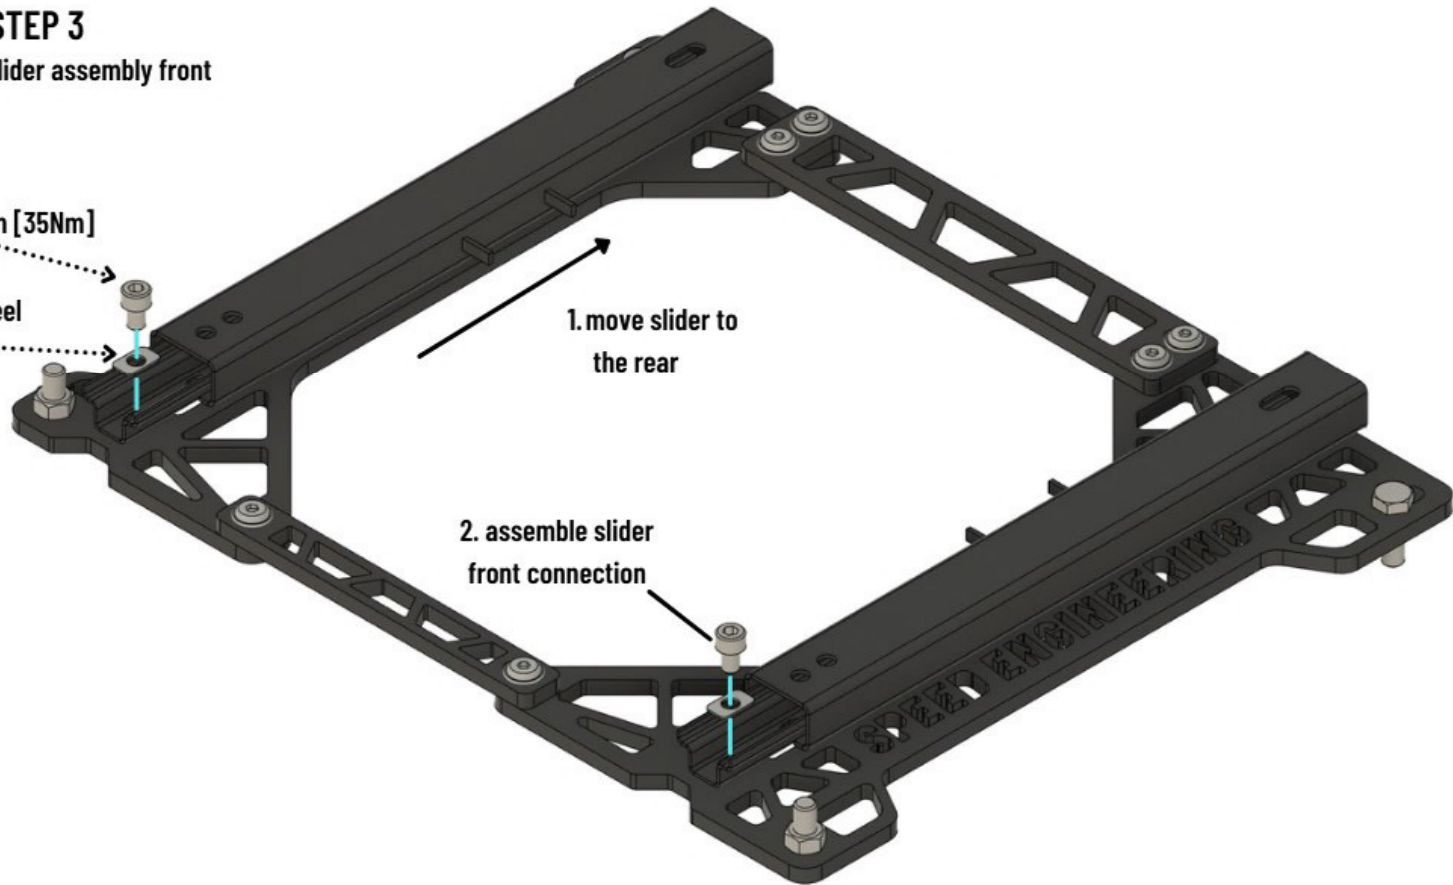

STEP 4
Slider lever assembly

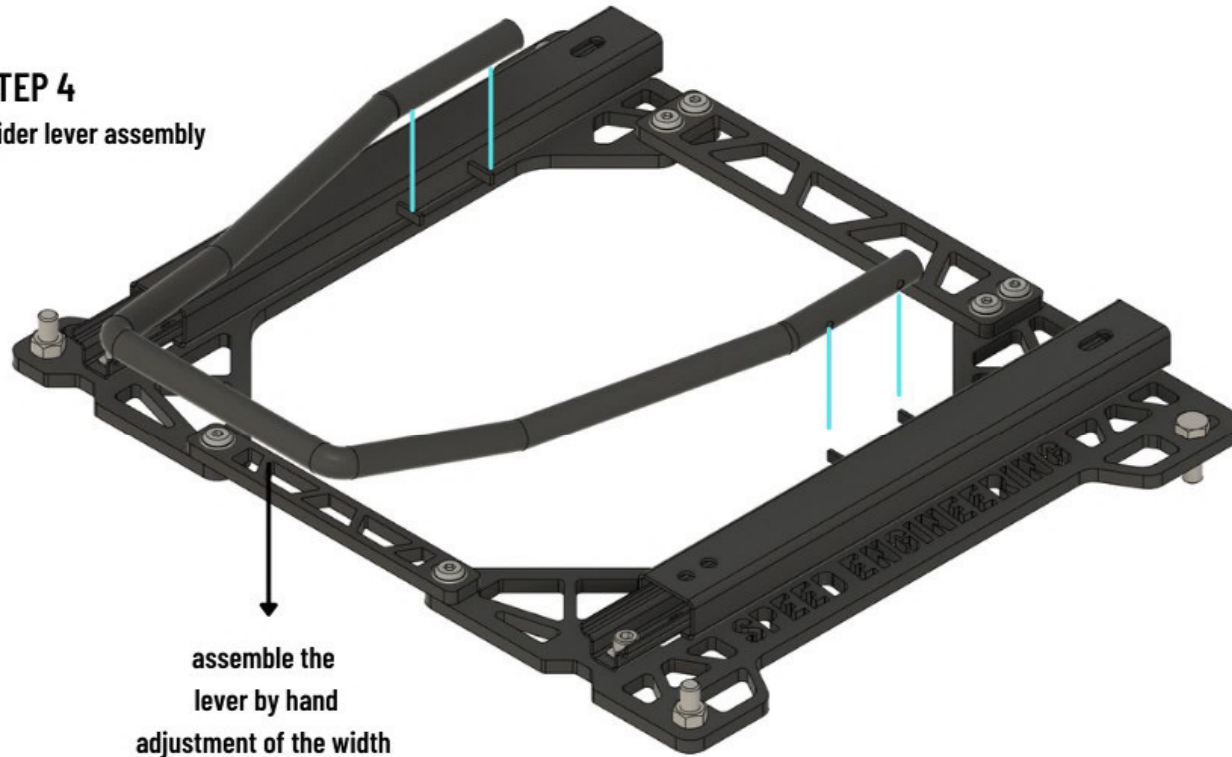

assemble the
lever by hand
adjustment of the width
by pulling the lever ends by hand

STEP 5


L Adaptor assembly front

2x M8 nut [30 Nm]
4x M8 spacer

2x M8 / 16 mm [30 Nm]


If the seat position is not known yet,
only hand tight assembly is recommended.
Final assembly can be done with the installed seat.

recommendation:
use special slider tool to counter the
screw inside the slider, Art. 13202

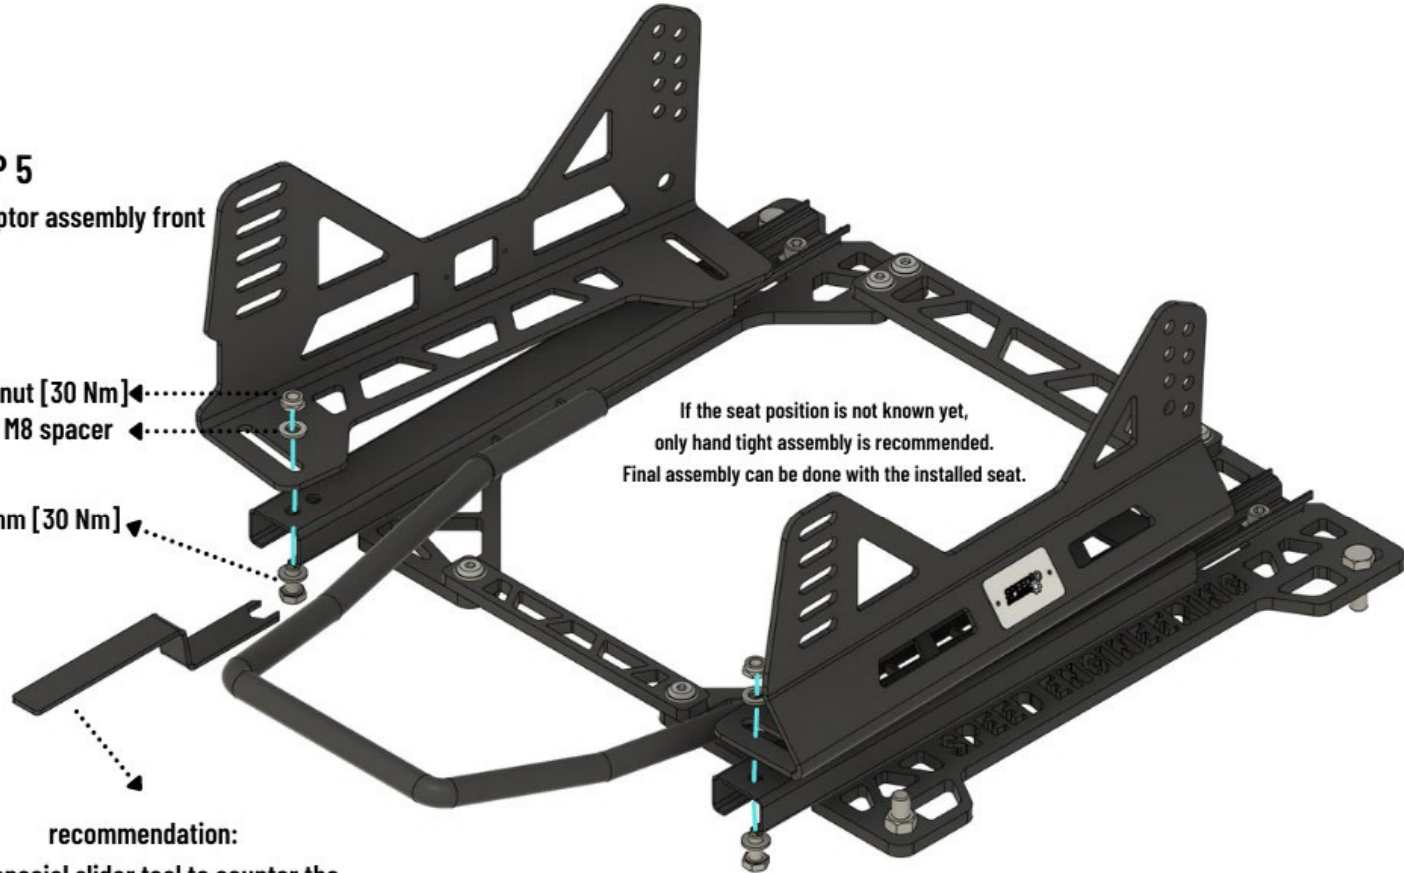

STEP 6


L Adaptor assembly rear

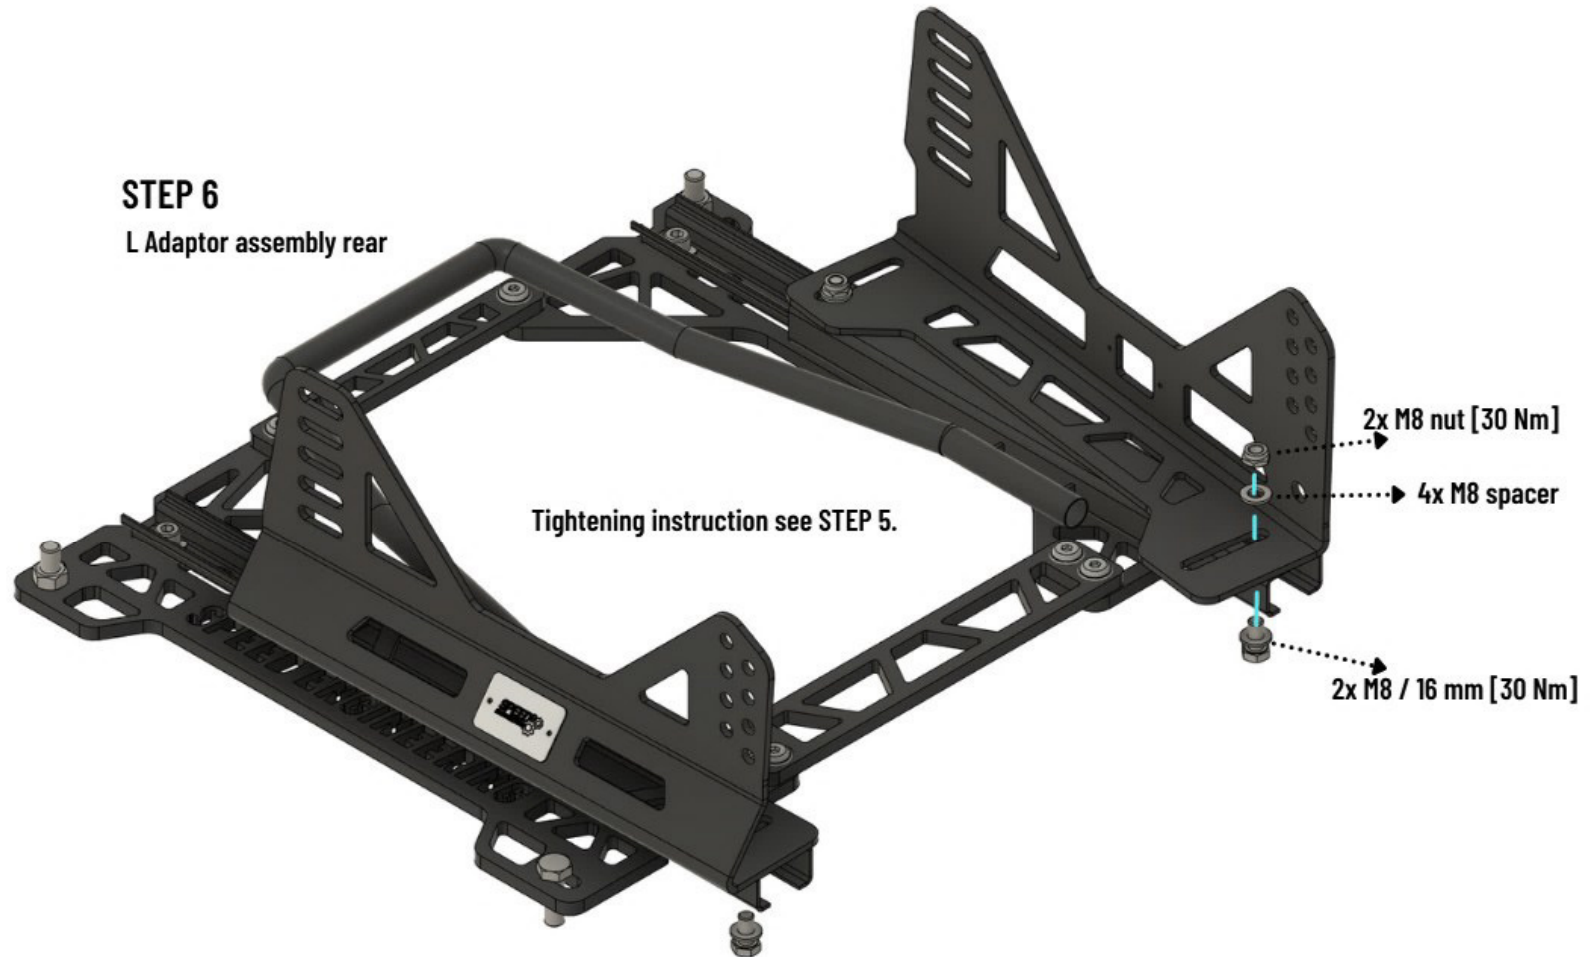

STEP 7

Seat assembly

4x M8 / 30 mm [30 Nm]
4x M8 spacer

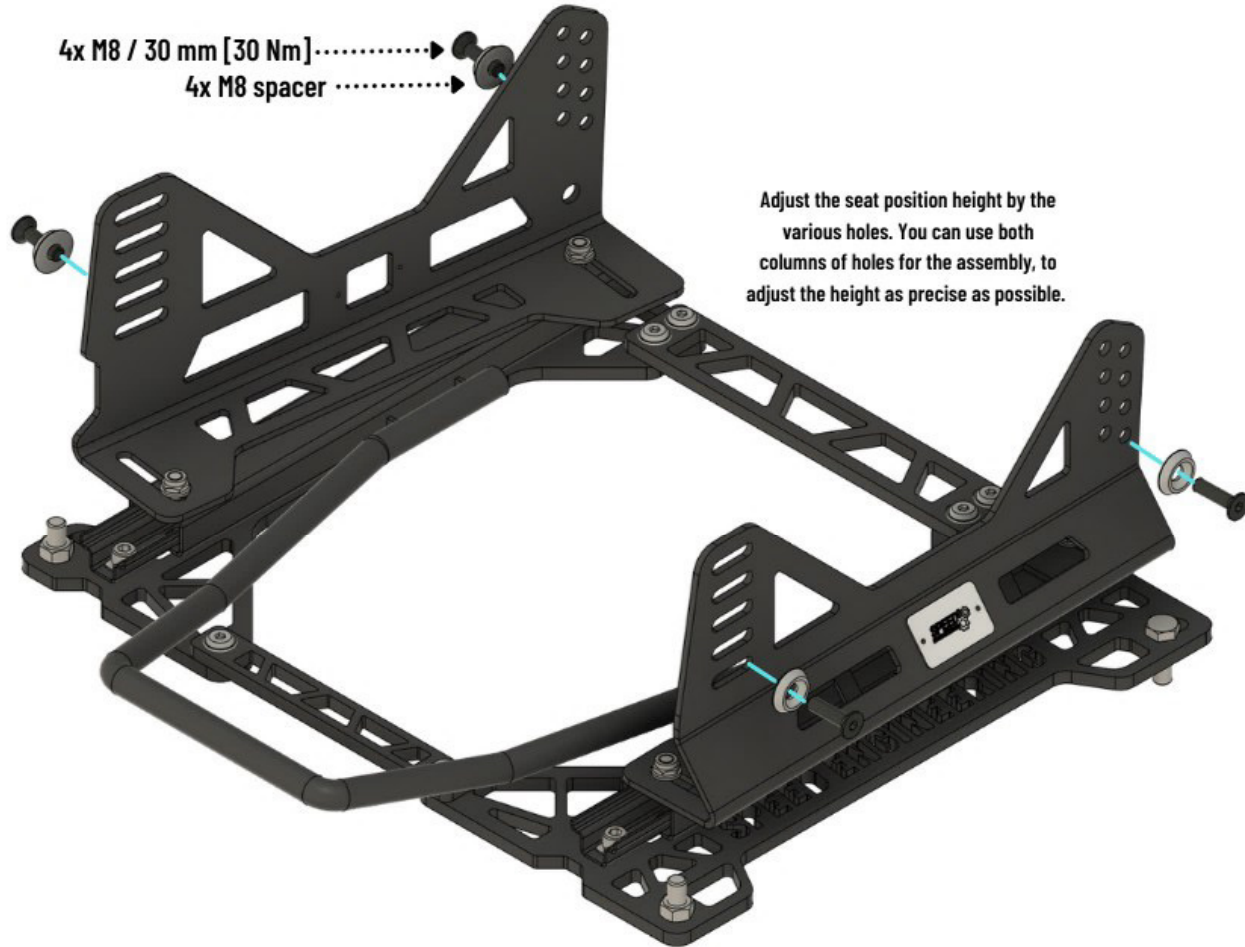

Adjust the seat position height by the various holes. You can use both columns of holes for the assembly, to adjust the height as precise as possible.

STEP 8
Seat adjustment
Driver



Enjoy the ride.